






FILTER
CONTROL PANEL W/ ATU
1744R1

Delta Treatment Systems
9125 Comar Drive
Walker, LA 70785
(225) 665-6162 Fax (800) 219-9183

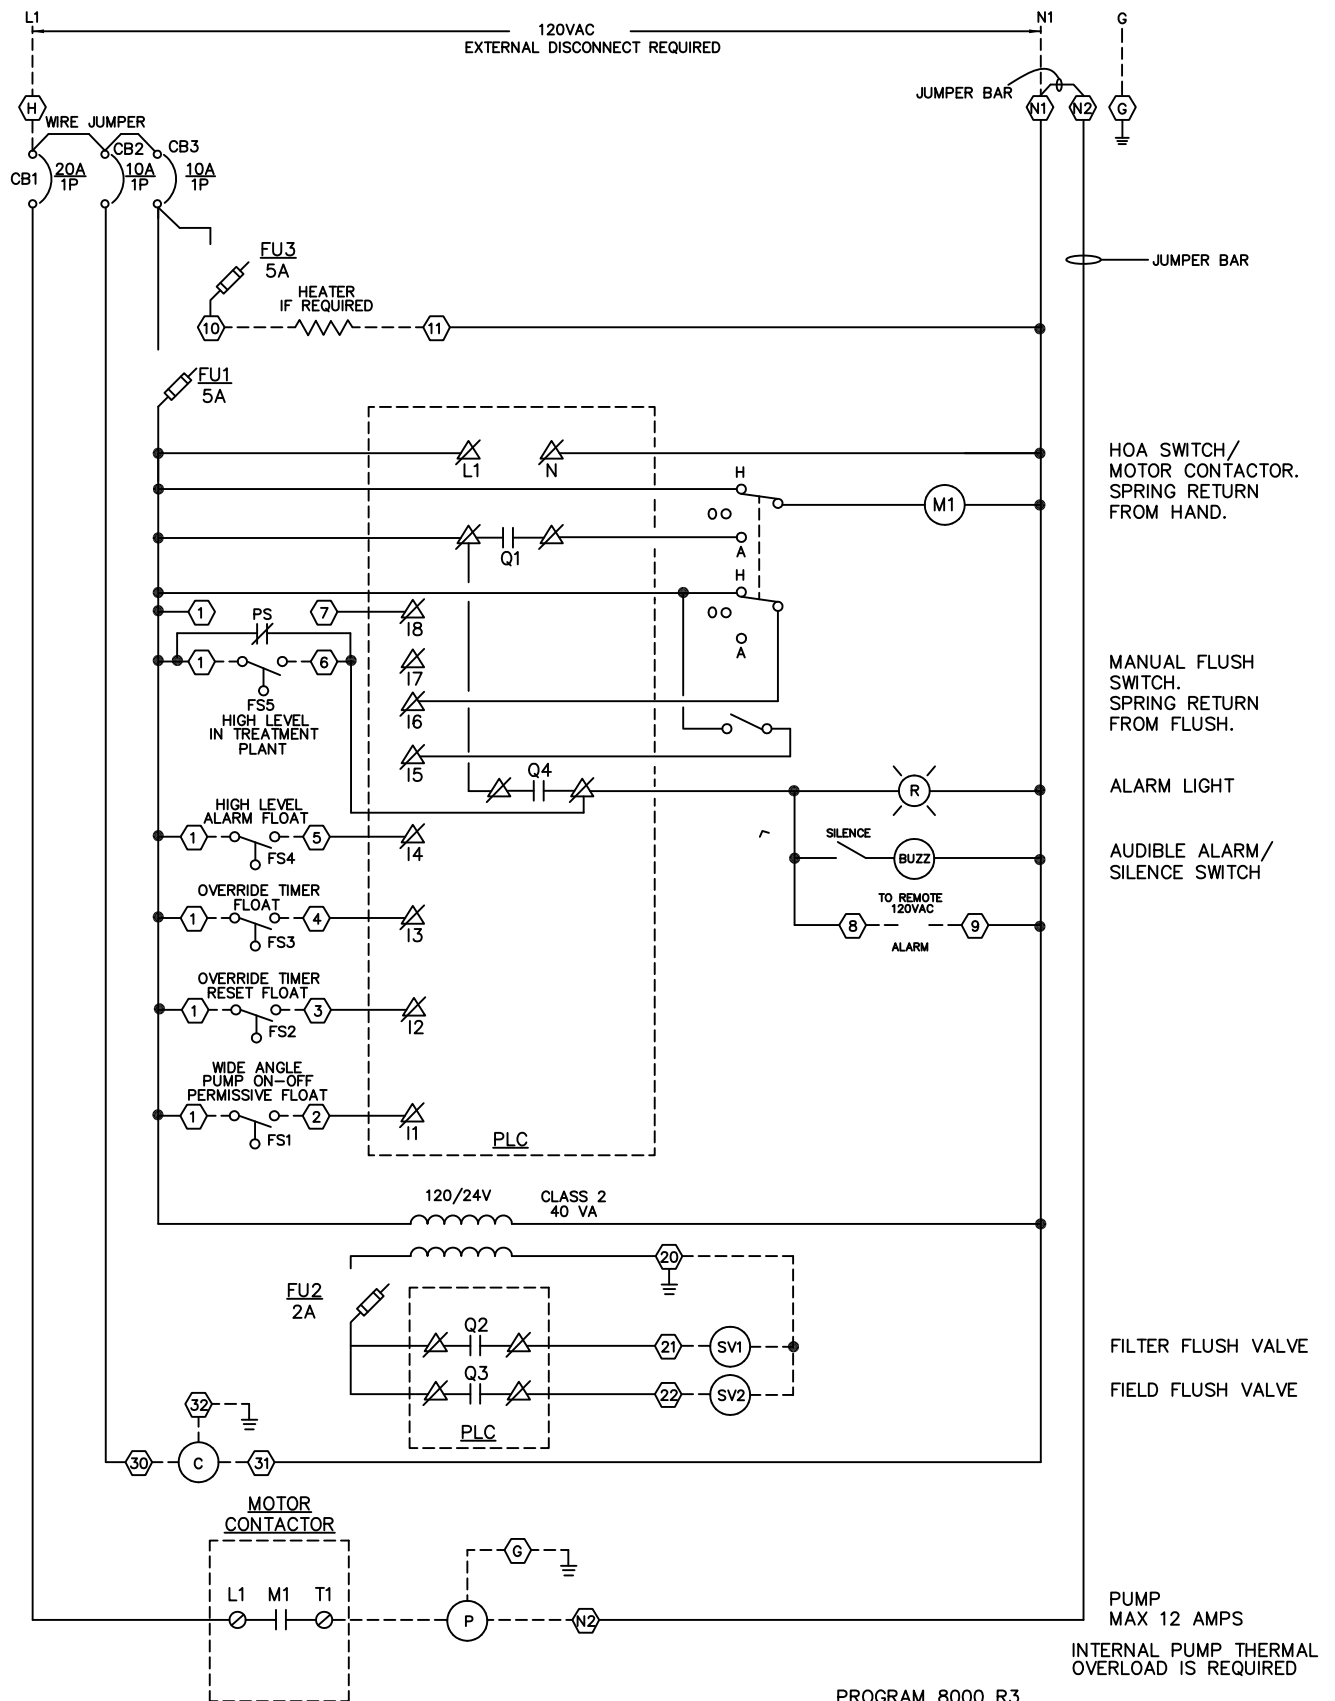

	Drawing Title				
	SCHEMATIC DIAGRAM				
DATE: 02/08/22		REFERENCE DRAWING	NO.	REVISION - LOCATION	ECN DATE BY
	Project Title	S/N	Sales Engineer C.C.	Application Engineer C.C.	DRAWN BY: BMM
	FILTER CONTROL PANEL			9125 Comar Drive Walker, LA 70785	APPROVED BY: DATE:
				Ph. (225) 665-6162 Fax (225) 219-9183	PURCHASE ORDER NUMBER
					DRAWING NUMBER CP-1744R1
					SHEET NUMBER 1

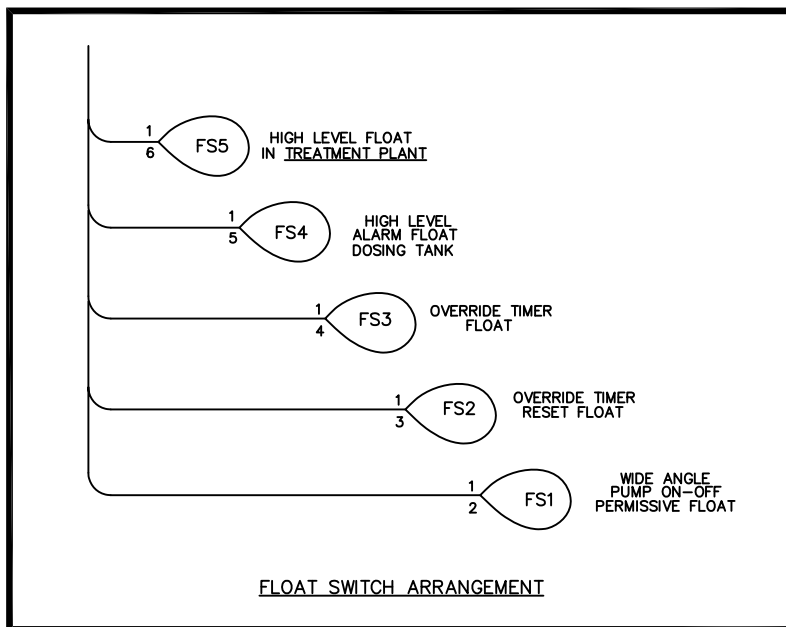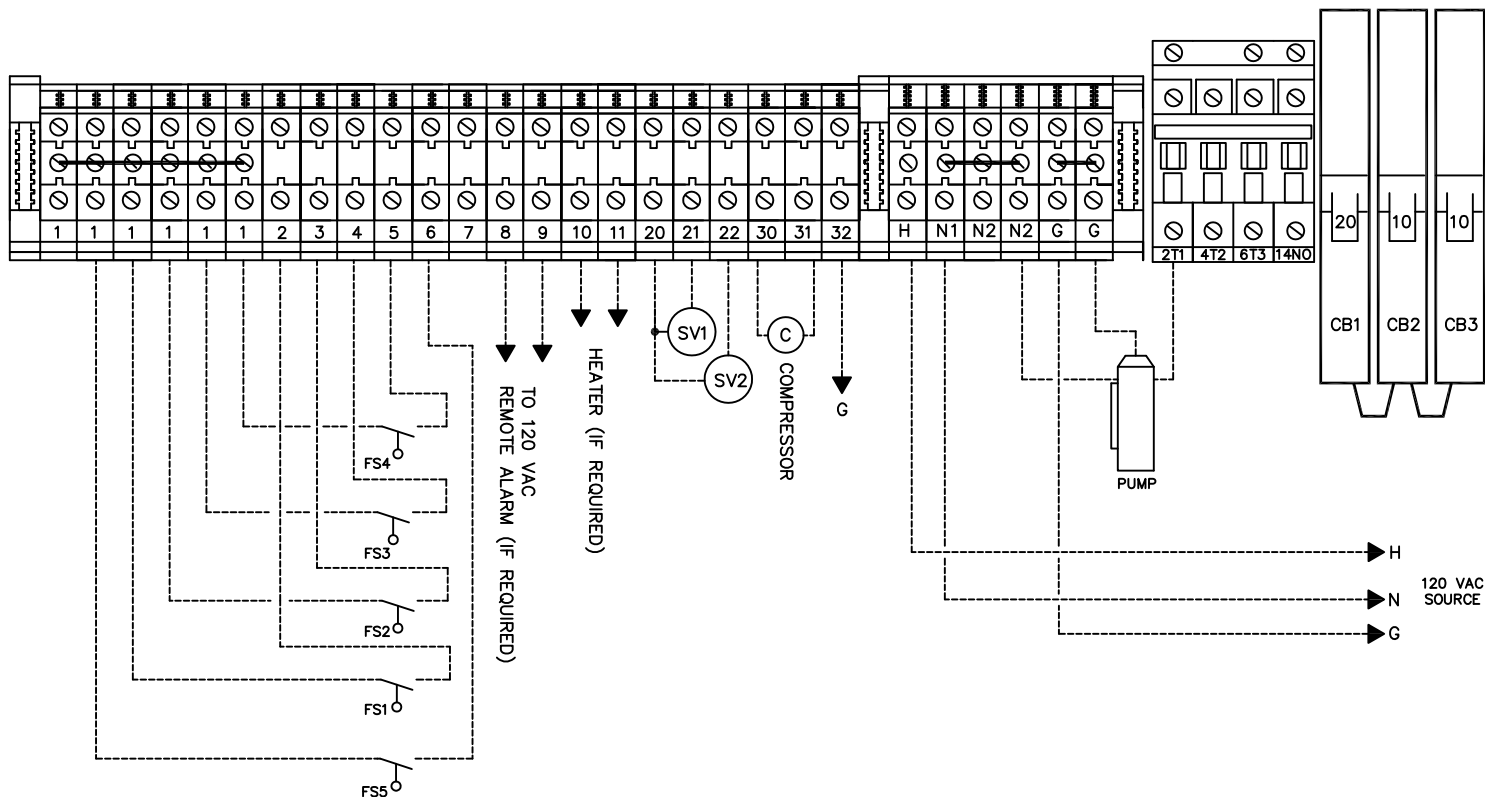


	Drawing Title						
DATE: 02/08/22	EXTERNAL CONNECTIONS	REFERENCE DRAWING		NO.		REVISION - LOCATION	
		S/N		Sales Engineer C.C.		Application Engineer C.C.	
	Project Title					BY: BMM	
						APPROVED	
	FILTER CONTROL PANEL					PURCHASE ORDER NUMBER	
						DRAWING NUMBER CP-1744R1	
						SHEET NUMBER	
						2	





9125 Comar Drive
Walker, LA
70785
Ph. (225) 665-6162
Fax (225) 219-9183

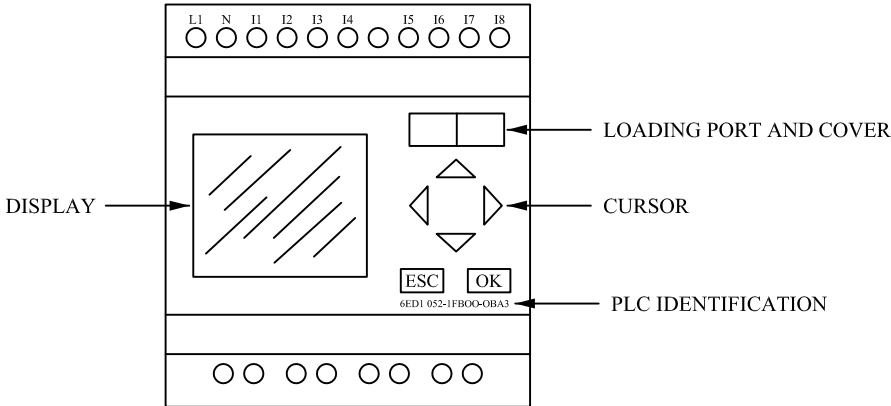SETTING THE PLC



FRONT VIEW OF PLC





The clock screen is considered the "main" screen and will be the starting point for all programming.


- Upon power up, the clock screen may not be displayed.
- Use  and  to reach the main screen (clock showing) and to scroll through data display screens.

Setting Parameters:

1. Press **▼** until you see the main screen (clock showing) and then press **ESC**. The main menu is now displayed.
2. From the main menu, use **▲** or **▼** to highlight "Program" and press **OK**. The program menu is now displayed.
3. From the program menu, use **▲** or **▼** to highlight "Set Parameter" and press **OK**. The parameter list is now displayed.
4. Use **▲** or **▼** to scroll through the parameter list. Once the desired parameter is highlighted, press **OK**.
5. Use **▲** or **▼** to highlight desired parameter setting and press **OK**. A blinking cursor will appear.
6. Use **▲** or **▼** to move the cursor and the **◀** or **▶** to change values.
7. Press **OK** after changing parameter setting and the cursor will disappear.
8. Once parameter setting(s) are changed, press **ESC** to return to parameter list.
9. Repeat Step 4-9 until all parameters are set to the correct values.
10. Press **ESC** one time to return to program menu; two times to return to main menu; three times to return to main screen (clock showing).

Notes:

- To view inputs, at the main screen (clock showing) press .
 - To return to main screen (clock showing) press .
- To view outputs, at the main screen (clock showing) press  twice.
 - To return to main screen (clock showing) press  twice.

	Drawing Title								
	PLC INSTRUCTIONS								
		-	-	-	-	-	-	-	-
DATE: 02/08/22		REFERENCE DRAWING	NO.	REVISION - LOCATION			ECN	DATE	BY
	S/N	Sales Engineer C.C.	Application Engineer C.C.	DRAWN BY: BMM		APPROVED			
	Project Title FILTER CONTROL PANEL				9125 Comar Drive Walker, LA 70785 Ph. (225) 665-6162 Fax (225) 219-9183		PURCHASE ORDER NUMBER		
							DRAWING NUMBER CP-1744R1		
							SHEET NUMBER 3		

PLC PARAMETERS


<u>BLOCK</u>	<u>DESCRIPTION</u>	<u>FACTORY SETTING</u>	<u>PLC NOMENCLATURE</u>
B01	TH = Run time TL = Off time	12 Minutes 2 Hours	12:00m 02:00h
B02	Off time during override period	1 Hour	01:00h
B03	Filter flush time after pump turns on	1 Minute	01:00m
B04	Filter drain time after pump turns off	2 Minutes	02:00m
B05	Field flush time normal operation	2 Minutes	02:00m
B06	Field drain time after pump turns off	2 Minutes	02:00m
B07	Number of fields	4	4
B08	Number of cycles until 1st field flush	84	84
B09	Field flush time when field flush switch is pressed	1 Minute	01:00m

Note: Minute settings are in minutes and seconds. For example 02:00m is 2 minutes, 02:10m is 2 minutes and 10 seconds. Hour settings are in hours and minutes. For example 02:00h is 2 hours and no minutes, 02:10h is 2 hours and 10 minutes, and 00:12h is 12 minutes.

In addition to the settings above, various other parameters can be viewed as follows:

- Pump run time hours
- Pump start counts
- Level override counts
- High level counts
- Switch to hand counts

02/08/22
8000 R3

	Drawing Title								
	PLC PARAMETERS								
		-	-	-	-	-	-		
DATE: 02/08/22		REFERENCE DRAWING	NO.	REVISION - LOCATION			ECN	DATE	BY
		S/N	Sales Engineer C.C.	Application Engineer C.C.	DRAWN BY: BMM		APPROVED BY: DATE:		
	Project Title				9125 Comar Drive Walker, LA 70785 Ph. (225) 665-6162 Fax (225) 219-9183		PURCHASE ORDER NUMBER		
	FILTER CONTROL PANEL						DRAWING NUMBER CP-1744R1		
							SHEET NUMBER 4		

